

 
 


CITY

60163






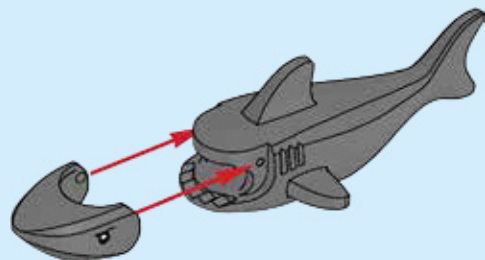
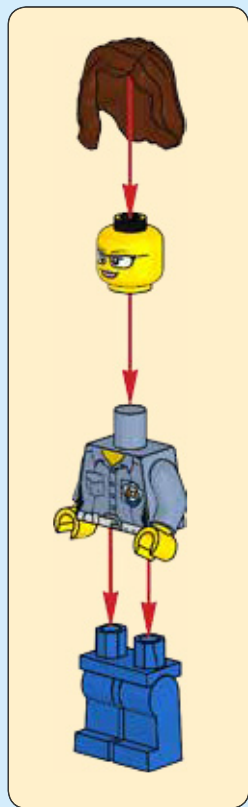


1




   2

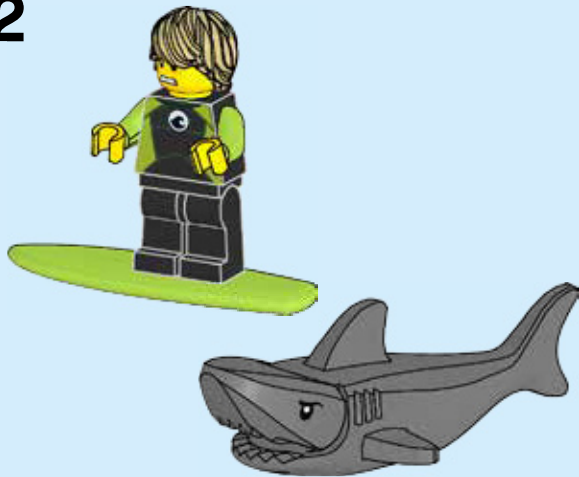


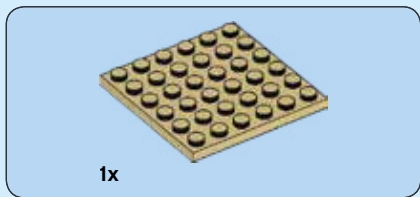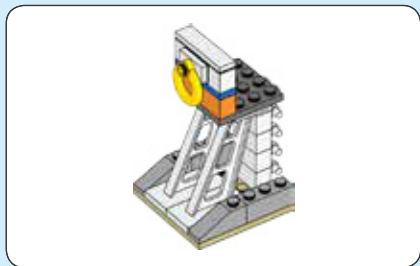


1

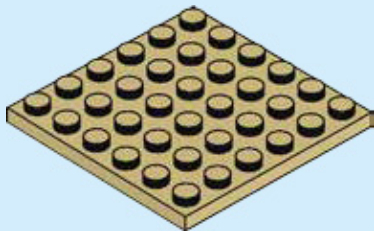 


2

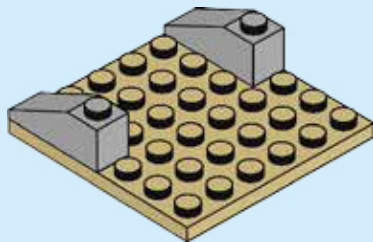 

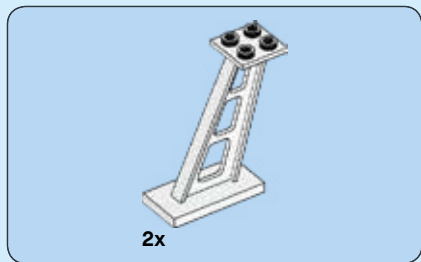 

3

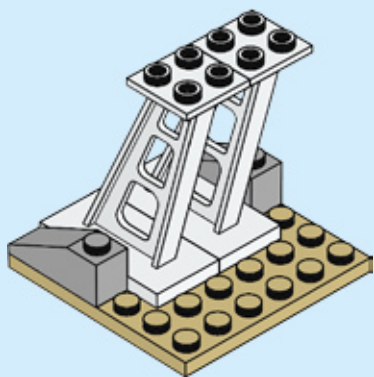 


6




2x

 4

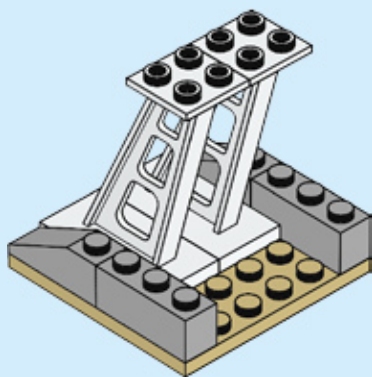

5x

 
5

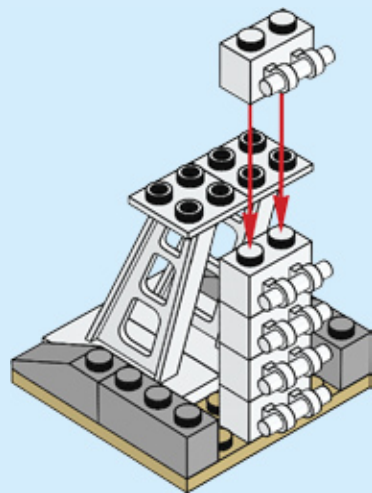



1x

 6

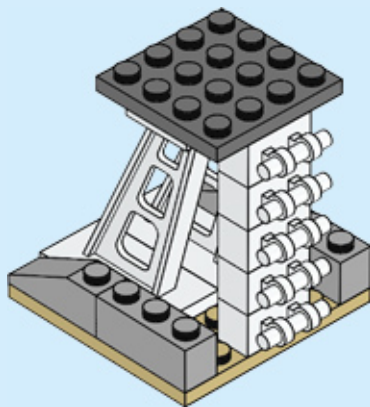

8



 
1x



2x



1x



1x



1x



 
1x




1x

7


1

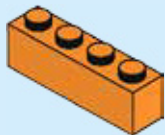


2

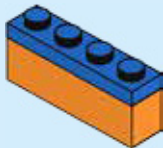 


3

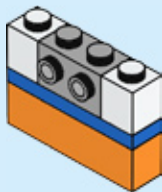 

4


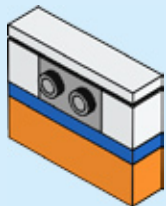 



5

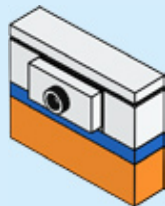 

6



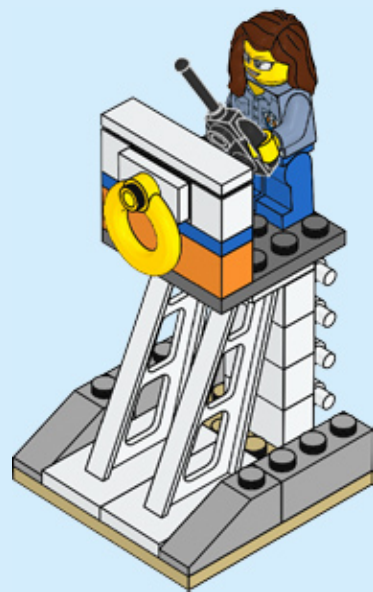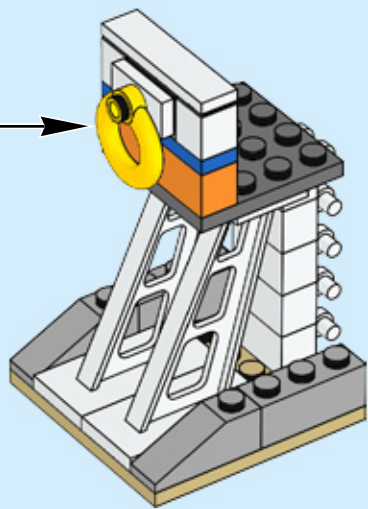  

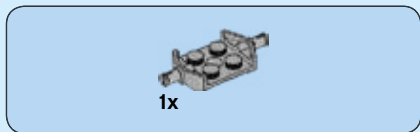 


1






1x

 2

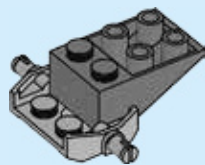

1x

 
3

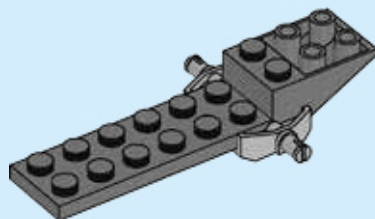





1x

 4

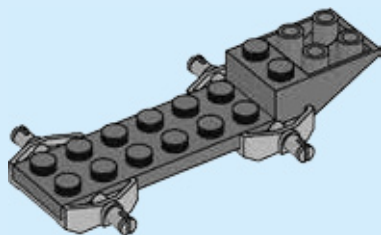




5

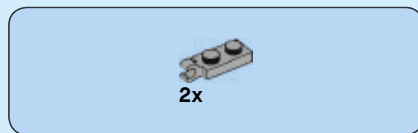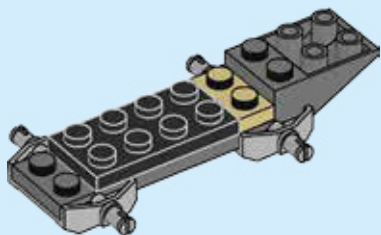  


6

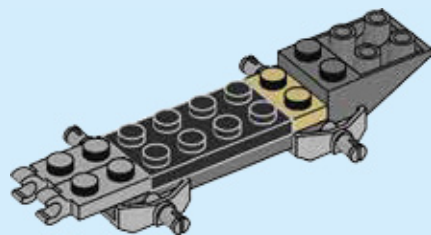 




7

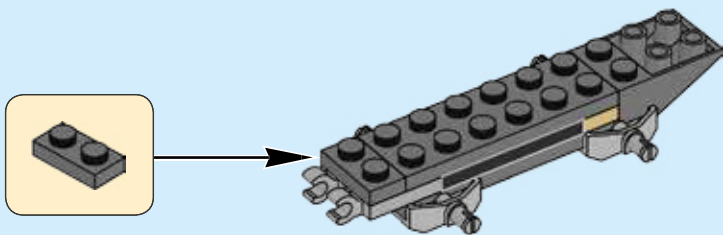 



1x

 8

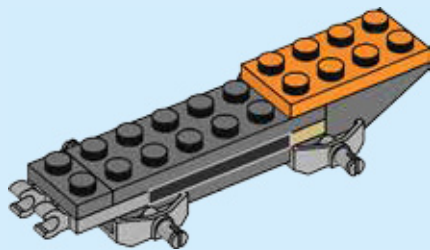



1x



1x

  
9

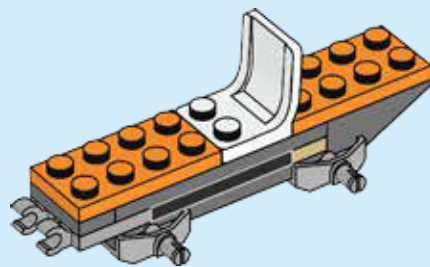

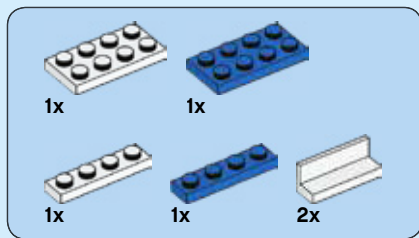

10

 
1

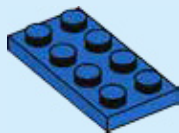

2




 
3

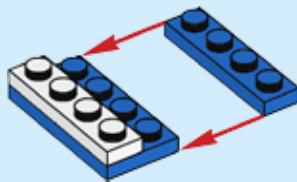


4




   5

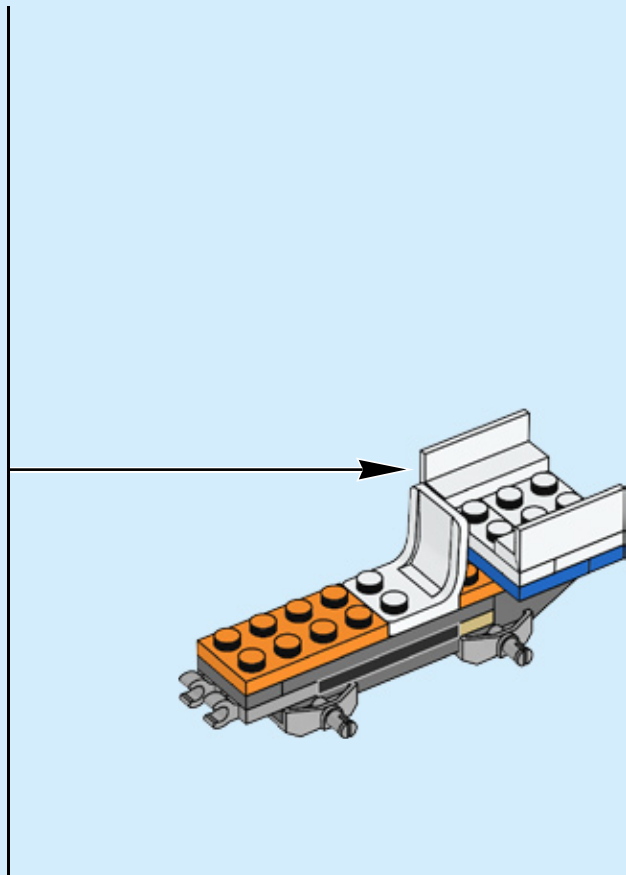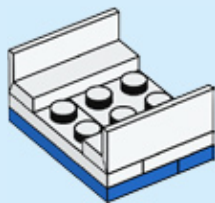


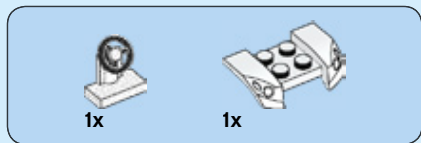

11

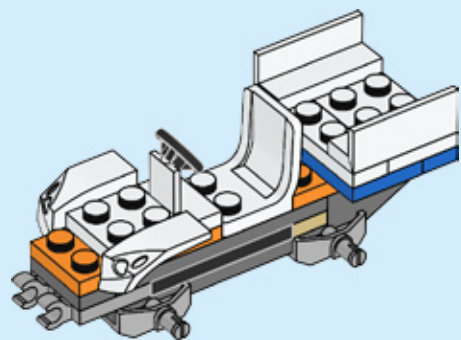 


12

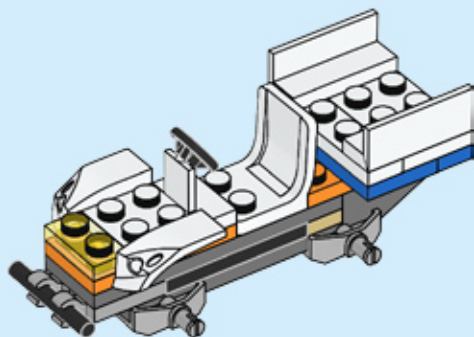 




2x

 
13

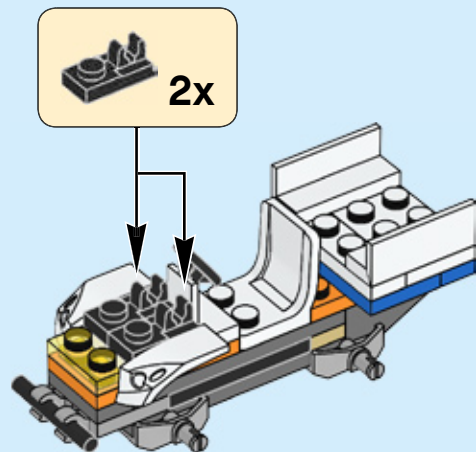


1x

  
14

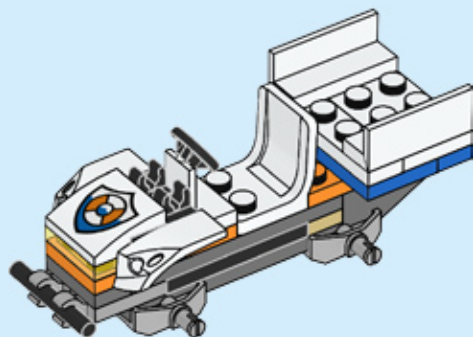


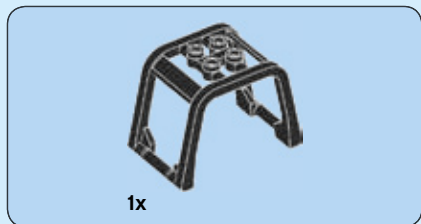


15

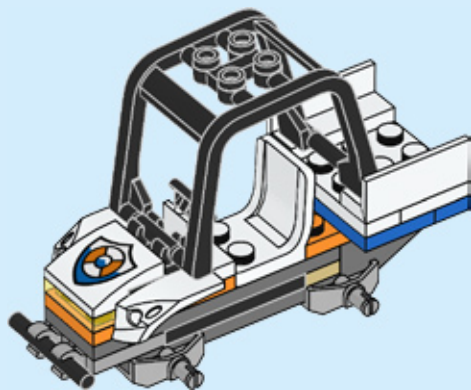 

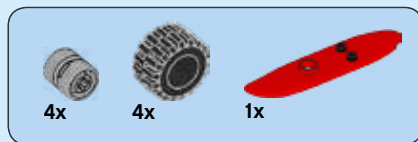 

16

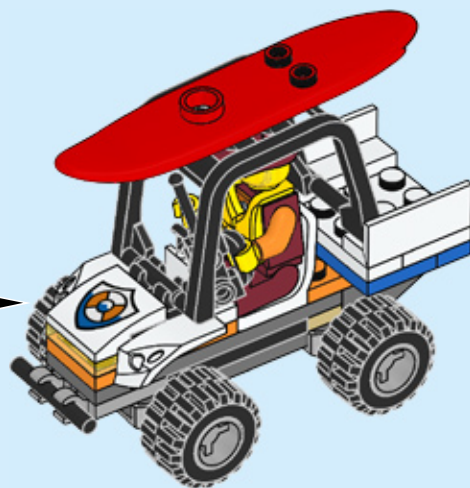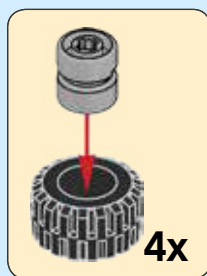  

2x
300501



1x
6051511



1x
9551



5x
4140626



1x
6183758



1x
407901



2x
6139694



1x
243101



1x
371001



1x
302001



1x
4297330



1x
6093519



2x
4142125



1x
4113917



1x
9341



2x
371023



1x
302023



1x
6182787

1x
4261572



1x
6153328



1x
4648281



1x
4527354



1x
6182699



1x
4194746



1x
6182771



1x
6182805



1x
6093525



2x
4598528



2x
6100054



1x
9339



4x
4568644



1x
302026



1x
4118827



2x
4158355



1x
6102964



1x
4541496



1x
4550736



4x
4211764



1x
6015344



2x
4535738



2x
4211428



2x
4211488



2x
4211569



1x
4211051



1x
4211063



1x
6107827



1x
4211064



1x
4243831



 
2x
4211002



1x
6044722



1x
4539385



1x
4125217



1x
6175655



1x
6175655



1x
6102906



Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

LEGO.com/service or dial



00800 5346 5555 :



1-800-422-5346 :

